

Your new Oven Tamer 3 is a precision temperature controller for electric toaster ovens, smokers, kilns, etc.

It is the ideal partner for your stabilizing and drying needs where control of the heat source makes the job so

much easier! Not only better control, but by having such control, you can cure your Cactus Juice stabilized material at a lower temperature and reduce bleed out. The normal suggested cure temperature of Cactus Juice is 200° F. However, the actual cure range is 178° F to 204° F. The lower the temperature, the less bleed out you get. Higher temperatures are recommended for customers with regular ovens since there is such a huge temperature swing (up to 50° F) between when the elements in the oven are on and off. With the Oven Tamer 3, the temperature will rise to the set point and then the sophisticated PID control module will apply just enough power to keep the temperature steady within a couple of degrees F! Add the convenient digital temperature display and setting as well as the auto off timer and you have a powerful ally in your stabilizing endeavors!

Warning: Do not use with any appliance that exceeds 125V and 15AMPS or 1,875 watts!

Directions for Use

- 1. Unpack the Oven Tamer and plug the supplier cord into the wall and the back of the Oven Tamer.
- 2. Unpack the thermocouple (the wired component with the yellow plug) and plug in to the back of the Oven Tamer in the round yellow thermocouple receptacle.
- 3. Attach the thermocouple alligator clip to the rack in the center of your oven
- 4. Plug the oven into the receptacle on the back of the Oven Tamer. It will no longer be plugged in to the wall!
- 5. Set the thermostat on the oven to 350° F or so
- 6. Turn on the Oven Tamer using the button on the timer and allow it to go through the self-test routine
- 7. Once the self-test routine is finished you will see the actual temperature of the oven in red with the desired temperature below it in green. I have pre-set the temperature when testing your unit to 200° F.
- 8. Auto Tune your Oven Tamer (see below). This is necessary any time you move the Oven Tamer to a different oven.
- 9. To change the temperature, push the repeatedly until the digit you want to change on the lower, green display is flashing. Use the to change the setting as desired.
- 10. Once the temp is what you want, press and you are up and running!

Auto Tuning for Your Specific Oven

Each oven is different and heats and cools at different rates. As a result, it is best to tune your controller for the specific oven being used. This simple procedure should be done every time you move the Oven Tamer to a different oven.

- 1. After the oven has warmed up, press and hold until the green light furthest to the right next to AT is lit.
- 2. Allow the Oven Tamer to work through the tuning cycle and when the green light goes out, your Oven Tamer is tuned for that oven!

Change Automatic Off High Temperature Alarm

Your Oven Tamer is equipped with an auto off high temperature alarm that will cut the power to the Oven Tamer and oven if the alarm set temperature is exceeded. I have preset the alarm to 260° F. You can change this alarm set point as needed. To do so, press and hold until the display changes to AL 1. Then push the repeatedly until the digit you want to change on the lower, green display is flashing. Use the to change the setting as desired. Once done, press until the display returns to the temperature display.

Using the Timer

- 1. For manual power switching, press the ONOFF. The LCD will show "On", confirming the switch is on.
- 2. There are 4 individual timers available: Two minute timers (default times are 30 minutes and 60 minutes), and two hourly timers (default times are 12 hours and 24 hours).
- 3. Press the button to switch between minute and hour timer modes. The display will change to show 4 digits for the hour timer mode and 2 digits for the minute timer mode.
- 4. To set the timer, press the 30 min/12 Hours or 60 min./24 Hours (button on the face of the timer. The timer will stay on for the selected time and the LCD display will show the time remaining.
- 5. You can fine-adjust the turn off time. Select your mode for default turn off time. When the display is flashing, press the button to adjust the time up or down.
- 6. If you want to reset the unit, just press the Reset button. Timer will return to the default time.

